

 
**Uputstvo za programiranje PRO TRACER ANL810K
za MIKRO (verzija 01)
UP20.01**

Podešavanje DEFAULT vrednosti



1.

Početak sekvence podešavanja



2.

Komunikacija: RS232



3.

Kraj sekvence podešavanja



4.

Sema veze kablova :

RJ11 (4/6)

DB9 male

1

9

2

5

3

2

4

3