

 
Uputstvo za programiranje PRO TRACER ANL810K za SHARP ER - A277S (verzija 01) UP11.01

Podešavanje DEFAULT vrednosti



1.

Početak sekvence podešavanja



2.

Komunikacija: RS232



 
3.

7 bita podataka



4.

parnost odd (neparna)



5.

uključen RTS/CTS protokol



6.

odbacivanje vodeće cifre za UPC



7.

isključen prenos check digita za



8.

završetak tekstualne poruke CR/LF



9.

Kraj sekvence podešavanja



10.

DB9 ZENSKI

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9

BOJA ZICE

- nema vezu
- zuta
- narandzasta
- nema vezu
- crvena
- nema vezu
- zelena
- braon

crvena-spaja se i na spoljni izvod dzeka za napajanje

crna-ova veza se spaja i na unutrašnji izvod dzeka za napaj.
Ova veza ne ide na kasi jer se koristi eksterno napajanje