


**3.9.5.6. PROGRAMOWANIE SKANERA MS-860,
MS-700, MS-6720 DO WSPÓŁPRACY
Z KASĄ SHARP ER-A457P**

Enter/Exit Program Mode

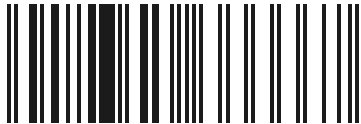


Load DEFAULTS



4800 Baud Rate



Enable STX Prefix

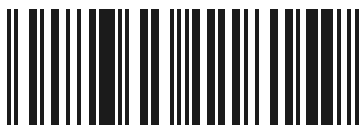

Odd Parity



Enable RTS/CTS Handshaking



Enable UPC Prefix ID



Transmit Lead Zero on UPC-E



Enter/Exit Program Mode




**3.9.5.7. PROGRAMOWANIE SKANERA
ARGUS, ORBIT I VOYAGER MS-9520,
MS-9540 DO WSPÓŁPRACY
Z KASĄ SHARP ER-A457P**

Enter



RECALL DEFAULTS

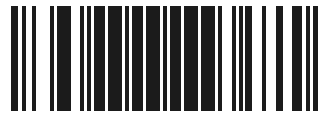

Transmit Lead Zero on UPC-E



4800 Baud Rate



Enable STX Prefix



Odd Parity



Enable RTS/CTS Handshaking



Enable UPC Prefix ID



Exit

